



步骤 Procedure

1、消火栓的阀门处于关闭状态。

The fire hydrant valve is closed.

2、用扳手松开(20-32)螺栓和 (20-12)螺母。

Use a wrench to loosen the (20-32) bolt and (20-12) nut.

3、操作螺母不要关闭太紧，处于关闭松解状态。

Do not close the operating nut too tightly, it is in the state of closing and loosening.

4、然后把上筒体稍微上提就可自由 360° 旋转。

Then, lift the upper barrel slightly and it can rotate 360° freely.

5、上筒体确认方向后，用扳手把(20-32)螺栓和 (20-12)螺母给予锁紧固定。

After confirming the direction of upper barrel, use wrench to lock and fix the (20-32) bolt and (20-12) nut.

6、锁紧螺栓螺母后，打开消火栓进行测试，看法兰连接处是否有漏水，必要时加以紧固。

After locking the bolts and nuts, open the fire hydrant for testing to see if there is water leakage at the flange connection, and fasten it if necessary.