

IDO-Purple Pi OH RK3566-V1 OpenHarmony开发手册

1. 环境搭建

2. OpenHarmony5.0 SDK编译

2.1. OHOS5.0 源码获取

2.1.1. 全量SDK获取

2.1.2. OHOS5.0 官方源码获取

2.2. 打补丁

2.3. OHOS5.0 SDK编译

2.3.1. SDK完整编译

2.3.2. 编译MIPI固件

2.4. full-sdk下载链接

3. OpenHarmony4.1 SDK编译

3.1. OHOS4.1 源码获取

3.2. 打补丁

3.3. OHOS4.1 SDK编译

3.3.1. SDK完整编译

3.3.2. 编译不同dts

4. OpenHarmony4.0 SDK编译

4.1. OHOS4.0 源码获取

4.2. 打补丁

4.3. OHOS4.0 SDK编译

4.3.1. SDK完整编译

4.3.2. 编译不同dts

5. FAQ

5.1. 烧录MIPI固件系统一直重启

5.2. 系统启动后进入不到桌面

5.3. 双频WiFi模块蓝牙打不开

5.4. 怎样编译full-sdk

5.5. OpenHarmony 设置应用开机自启动

5.6. OpenHarmony 4.1release 去除锁屏



IDO–Purple Pi OH RK3566–V1

OpenHarmony开发手册

深圳触觉智能科技有限公司

www.industio.cn

文档修订历史

版本	修订内容	修订	审核	日期
V1.0	创建文档	TOCA	IDO	2023/04/06
V1.1	优化文档	TOCA	IDO	2023/04/26
V1.2	添加OpenHarmony3.2补丁	HJT	IDO	2023/05/13
V1.3	增加OpenHarmony 4.0 SDK	TOCA	IDO	2023/10/30
V1.4	修复开机不进桌面BUG	TOCA	IDO	2023/11/02
v1.5	增加OpenHarmony 4.1 SDK	HWC	IDO	2024/04/22
V1.6	优化文档	LZR	IDO	2024/05/15
V1.7	增加OpenHarmony5.0 SDK	HWC	IDO	2024/10/28

1. 环境搭建

推荐编译主机配置如下：

- 1. Ubuntu22.04 LTS搭建开发环境
- 2. 64 位 CPU
- 3. DDR至少16GB
- 4. 至少120GB的硬盘空间

安装工具包，在编译主机执行以下命令：

```

1 $ sudo apt-get install aptitude
2 $ sudo aptitude install -y binutils binutils-dev git git-lfs gnupg flex bis
  on gperf build-essential zip curl zlib1g-dev gcc-multilib g++-multilib gcc-
  arm-none-eabi gcc-arm-linux-gnueabi x11proto-core-dev libx11-dev lib32z1-de
  v ccache libgl1-mesa-dev libxml2-utils xsltproc unzip m4 bc gnutls-bin pyth
  on3-pip ruby genext2fs device-tree-compiler make libffi-dev e2fsprogs pkg-c
  onfig perl openssl libssl-dev libelf-dev libdwarf-dev u-boot-tools mtd-util
  s cpio doxygen liblz4-tool openjdk-8-jre gcc g++ texinfo dosfstools mtools
  default-jre default-jdk libncurses5 apt-utils wget scons tar rsync git-cor
  e libxml2-dev lib32z-dev gsync xxd libglib2.0-dev libpixmap-1-dev kmod jfs
  utils reiserfsprogs xfsprogs squashfs-tools git-lfs
3 $ sudo apt-get install -y pcmciautils quota ppp libtinfo-dev libtinfo5 libn
  curses5-dev libncursesw5 libstdc++6 vim ssh locales gcc-arm-linux-gnueabi

```

2. OpenHarmony5.0 SDK编译

2.1. OHOS5.0 源码获取

OpenHarmony5.0Release版本特性说明：

<https://gitee.com/openharmony/docs/blob/master/zh-cn/release-notes/OpenHarmony-v5.0.0-release.md>

2.1.1. 全量SDK获取

链接: <https://pan.baidu.com/s/1ngEcAr7NgtTwfStgv8WyHg?pwd=1234>

提取码: 1234

下载后解压前先核对md5sum是否正确，成功后才能正常解压完成。

```

1 $ md5sum -c md5sum.txt
2 Purple-Pi-OH-5.0.tar.gz:成功
3 $ tar xzvf Purple-Pi-OH-5.0.tar.gz -C .

```

注意：全量代码无需再次打补丁，只需按2.3章节编译即可

2.1.2. OHOS5.0 官方源码获取

在Linux主机执行以下命令，获取的是与版本发布时完全一致的源码

```
Bash
1 $ repo init -u https://gitee.com/openharmony/manifest -b refs/tags/OpenHarmony-v5.0.0-Release --no-repo-verify
2 $ repo sync -c
3 $ repo forall -c 'git lfs pull'
```

SDK代码文件目录如下图所示：

```
IDO_Purple_Pi_OH_OHOS5.0r_1017$ ls
applications  build.py      device  foundation  napi_generator  qemu-run
arkcompiler   build.sh      docs    ide         out             test
base          commonlibrary domains  interface  prebuilts      third_party
build         developertools drivers  kernel     productdefine  vendor
```

2.2. 打补丁

本地下载：[IDO_PurplePiOH_V1A_OHOS5.0r_Patch_241017.zip](#)

下载后将补丁放到当前代码根目录下，如下图所示：

```
IDO_Purple_Pi_OH_OHOS5.0r_1017$ ls
applications  developertools  IDO_PurplePiOH_V1A_OHOS5.0r_Patch_241017  qemu-run
arkcompiler   device          interface                                     test
base          docs            kernel                                       third_party
build         domains        napi_generator                             vendor
build.py      drivers         out
build.sh      foundation     prebuilts
commonlibrary ide             productdefine
```

然后进入该补丁内执行命令：

```
Bash
1 $ unzip IDO_PurplePiOH_V1A_OHOS5.0r_Patch_241017.zip
2 $ cd IDO_PurplePiOH_V1A_OHOS5.0r_Patch_241017/
3 $ ./ido_patch.sh
```

补丁合并成功，如下图所示：

```
IDO_Purple_Pi_OH_OHOS5.0r_1017/IDO_PurplePiOH_V1A_OHOS5.0r_Patch_241017$ ./ido_patch.sh
drivers_patch complete!
```

2.3. OHOS5.0 SDK编译

2.3.1. SDK完整编译


先下载工具链，然后再执行编译命令(默认编译为32位系统)

▼

Bash

```
1 $ bash build/prebuilts_download.sh
2 $ ./build.sh --product-name purple_pi_oh --ccache
```

编译结果如下图所示：

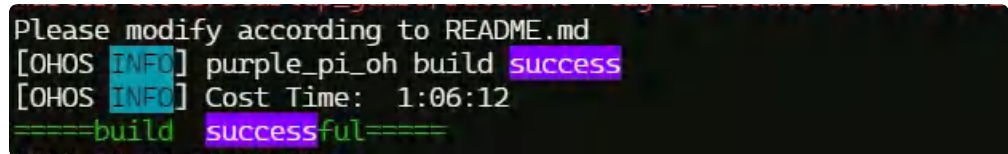

失败时log索引位置：./out/purple_pi_oh/error.log

固件索引位置：./out/purple_pi_oh/packages/phone/images/

2.3.2. 编译MIPI固件

默认编译出来的是HDMI固件，如果需要编译MIPI固件则修改：

▼

Bash


```
1 device/board/industio/purple_pi_oh/kernel/build_kernel.sh
```

▼

Bash

```
1 注释: #eval $MAKE_OHOS_ENV ./make-ohos.sh ID0-PurPle-Pi-OH-HDMI $RAMDISK_ARG ${ENABLE_LTO_00}
2 使用: eval $MAKE_OHOS_ENV ./make-ohos.sh ID0-PurPle-Pi-OH-MIPI $RAMDISK_ARG ${ENABLE_LTO_00}
```

如下图所示：

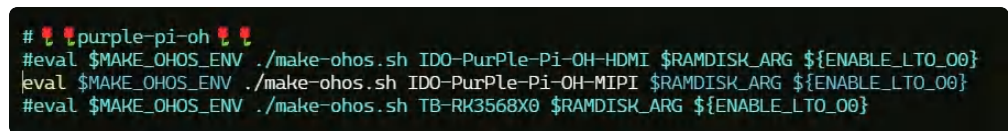

2.4. full-sdk下载链接

链接: https://pan.baidu.com/s/1L_aJDaMfENR5PQnlqJe8gg?pwd=1234

提取码: 1234

3. OpenHarmony4.1 SDK编译

3.1. OHOS4.1 源码获取

OpenHarmony4.1Release版本特性说明：

<https://gitee.com/openharmony/docs/blob/master/zh-cn/release-notes/OpenHarmony-v4.1-release.md>

在PC端的Linux主机执行以下命令，获取的是与版本发布时完全一致的源码。

Bash

```
1 # git在线下载最新SDK源码
2 $ repo init -u https://gitee.com/openharmony/manifest -b refs/tags/OpenHarmony-v4.1-Release --no-repo-verify
3 $ repo sync -c
4 $ repo forall -c 'git lfs pull'
```

SDK代码文件目录如下图所示：

```
industio@Ubuntu22:~/Purple-Pi-OH$ repo init -u https://gitee.com/openharmony/manifest -b refs/tags/OpenHarmony-v4.1-Release --no-repo-verify
repo: reusing existing repo client checkout in /home/industio/Purple-Pi-OH

Your Name [industio]: industio
Your Email [industio@ubuntu22]: industio@ubuntu22

Your identity is: industio
is this correct [y/N]? y

repo has been initialized in /home/industio/Purple-Pi-OH
industio@Ubuntu22:~/Purple-Pi-OH$ repo sync -c
industio@Ubuntu22:~/Purple-Pi-OH$ repo sync -c
Fetching: 100% (481/481), done in 29m7.019s
正在更新文件: 100% (14949/14949), 完成.play_manager正在更新文件: 61% (9119/14949)
正在更新文件: 100% (2168/2168), 完成.
正在更新文件: 100% (3970/3970), 完成.
正在更新文件: 100% (3894/3894), 完成.tion_config_policy正在更新文件: 81% (3189/3894)
正在更新文件: 100% (108/108), 完成.
正在更新文件: 100% (1081/1081), 完成.
正在更新文件: 100% (350/350), 完成.
正在更新文件: 100% (481/481), 完成.soc_beken正在更新文件: 44% (31210/70931)
正在更新文件: 100% (70931/70931), 完成.player_framework正在更新文件: 56% (19967/35655)
正在更新文件: 100% (35655/35655), 完成.
正在更新文件: 100% (10397/10397), 完成.exfatprogs正在更新文件: 61% (12288/20144)
正在更新文件: 100% (8460/8460), 完成.ty_rust_linux_raw_sys正在更新文件: 51% (4315/8460)
正在更新文件: 100% (127/127), 完成.
正在更新文件: 100% (20144/20144), 完成.
正在更新文件: 100% (69/69), 完成.
正在更新文件: 100% (2609/2609), 完成.
正在更新文件: 100% (23208/23208), 完成.libjpeg-turbo正在更新文件: 24% (13675/54844)
正在更新文件: 100% (1517/1517), 完成.
正在更新文件: 100% (67691/67691), 完成.
正在更新文件: 100% (3152/3152), 完成.ty_optimized_routines正在更新文件: 68% (37294/54844)
正在更新文件: 100% (54844/54844), 完成.
正在更新文件: 100% (7789/7789), 完成.ty_spirv-tools正在更新文件: 3% (234/7789)
Checking out: 99% (479/481), done in 35.507s
repo sync has finished successfully.
industio@Ubuntu22:~/Purple-Pi-OH$ repo forall -c 'git lfs pull'
industio@Ubuntu22:~/Purple-Pi-OH$ ls
applications  base  build.py  commonlibrary  device  domains  foundation  interface  napi_generator  qemu-run  third_party
arkcompiler  build  build.sh  developertools  docs  drivers  ide  kernel  productdefine  test  vendor
industio@Ubuntu22:~/Purple-Pi-OH$
```

3.2. 打补丁

直接下载：

📎IDO_PurplePiOH_V1A_OHOS4.1r_Patch_20240624.tar

网盘下载：

链接：https://pan.baidu.com/s/1l_UvsKL44TPOODv-n6mzkg?pwd=1234

提取码：1234

下载后将补丁放到当前代码根目录下，如下图所示：

```
cainiaocl@dell-PowerEdge-R740xd:/mnt/ssd1/hwc/ohos/ido_ohos_4.1r_office$ ls
device                                napi_generator
applications                          docs                                out
arkcompiler                          domains                            prebuilts
base                                 drivers                            productdefine
build                                foundation                         qemu-run
build.py                             ide                                test
build.sh                             IDO_PurplePiOH_V1A_OHOS4.1r_Patch_20240624  third_party
cainiaocl                             IDO_PurplePiOH_V1A_OHOS4.1r_Patch_20240624.tar  vendor
commonlibrary                       interface
developertools                       kernel
```

然后执行如下命令：

```
1 $ tar -xvf IDO_PurplePiOH_V1A_OHOS4.1r_Patch_20240624.tar
2 $ cd IDO_PurplePiOH_V1A_OHOS4.1r_Patch_20240624/
3 $ ./ido_patch.sh
```

打入补丁成功后如下图所示：

```
cainiaocl@dell-PowerEdge-R740xd:/mnt/ssd1/hwc/ohos/ido_ohos_4.1r_office/IDO_PurplePiOH_V1A_OHOS4.1r_Patch_20240624$ ./ido_patch.sh
drivers patch complete!
```

注意：一定要用命令解压，不能直接window本地解压，否则解压出来的文件会有问题

3.3. OHOS4.1 SDK编译

3.3.1. SDK完整编译

```
1 $ bash build/prebuilts_download.sh
2 $ ./build.sh --product-name purple_pi_oh --ccache --no-prebuilt-sdk
```

编译结果如下图所示：

```
All rules passed
[OHOS INFO] purple_pi_oh build success
[OHOS INFO] Cost time: 5:01:32
====build successful====
2024-05-22 00:02:48
+++++
```

失败时log索引位置: `./out/purple_pi_oh/error.log`

固件索引位置: `./out/purple_pi_oh/packages/phone/images/`

3.3.2. 编译不同dts

修改device/board/industio/purple_pi_oh/kernel/build_kernel.sh中的"IDO-PurPle-Pi-OH-HDMI"

编译为MIPI固件则改为: "IDO-PurPle-Pi-OH-MIPI"

```
▼ Plain Text |
1  #eval $MAKE_OHOS_ENV ./make-ohos.sh ID0-PurPle-Pi-OH-HDMI $RAMDISK_ARG ${EN
   ABLE_LT0_00}
2  eval $MAKE_OHOS_ENV ./make-ohos.sh ID0-PurPle-Pi-OH-MIPI $RAMDISK_ARG ${EN
   ABLE_LT0_00}
```

4. OpenHarmony4.0 SDK编译

4.1. OHOS4.0 源码获取

OpenHarmony4.0Release版本特性说明:

<https://gitee.com/openharmony/docs/blob/master/zh-cn/release-notes/OpenHarmony-v4.0-release.md>

在PC端的Linux主机执行以下命令, git在线下载最新SDK源码:

注意: 获取的是与版本发布时完全一致的源码。

```
▼ Bash |
1  $ repo init -u https://gitee.com/openharmony/manifest -b refs/tags/OpenHarmony-v4.0-Release --no-repo-verify
2  $ repo sync -c
3  $ repo forall -c 'git lfs pull'
```

获取到的SDK文件如下图所示：

```
industio@Ubuntu22:~/Purplr-Pi-OH$ repo init -u https://gitee.com/openharmony/manifest -b refs/tags/OpenHarmony-v4.0-Release --no-repo-verify
Downloading Repo source from https://mirrors.tuna.tsinghua.edu.cn/git/git-repo/
remote: Enumerating objects: 8841, done.
remote: Counting objects: 100% (5037/5037), done.
remote: Compressing objects: 100% (2530/2530), done.
remote: Total 8841 (delta 4821), reused 2507 (delta 2507), pack-reused 3804
repo: warning: verification of repo code has been disabled;
repo will not be able to verify the integrity of itself.

Your Name [industio]: industio
Your Email [industio@ubuntu22.04.myguest.virtualbox.org]: 2166452894@qq.com

Your identity is: industio <2166452894@qq.com>
is this correct [y/N]? y

repo has been initialized in /home/industio/Purplr-Pi-OH
industio@Ubuntu22:~/Purplr-Pi-OH$ repo sync -c
Fetching: 100% (474/474), done in 22m5.841s
正在更新文件: 100% (12798/12798), 完成.play_manager正在更新文件: 68% (8703/12798)
正在更新文件: 100% (3970/3970), 完成.
正在更新文件: 100% (1901/1901), 完成.
正在更新文件: 100% (716/716), 完成.zation_config_policy正在更新文件: 77% (557/716)
正在更新文件: 100% (3891/3891), 完成.
正在更新文件: 100% (107/107), 完成.bilitymgr_safwk正在更新文件: 39% (27655/70910)
正在更新文件: 100% (70910/70910), 完成.esp正在更新文件: 56% (15463/27612)
正在更新文件: 100% (27612/27612), 完成.
正在更新文件: 100% (10203/10203), 完成._grpc正在更新文件: 77% (10258/13322)
正在更新文件: 100% (13322/13322), 完成.
正在更新文件: 100% (8460/8460), 完成.
正在更新文件: 100% (24037/24037), 完成.
正在更新文件: 100% (12687/12687), 完成.pyyaml正在更新文件: 53% (1402/2609)
正在更新文件: 100% (2609/2609), 完成.lity正在更新文件: 42% (54/127)
正在更新文件: 100% (127/127), 完成.
正在更新文件: 100% (24455/24455), 完成._rust_pkg-config-rs正在更新文件: 21% (11761/54815)
正在更新文件: 100% (54815/54815), 完成._rust_btflags正在更新文件: 53% (29052/54815)
正在更新文件: 100% (59035/59035), 完成.
正在更新文件: 100% (6429/6429), 完成.
Checking out: 99% (472/474), done in 27.688s
repo sync has finished successfully.
industio@Ubuntu22:~/Purplr-Pi-OH$
> ^C
industio@Ubuntu22:~/Purplr-Pi-OH$ repo sync -c
Fetching: 100% (474/474), done in 3.994s
Checking out: 99% (472/474), done in 1.224s
repo sync has finished successfully.
industio@Ubuntu22:~/Purplr-Pi-OH$ repo forall -c 'git lfs pull'
industio@Ubuntu22:~/Purplr-Pi-OH$ ls
applications  base  build.py  commonlibrary  device  domains  foundation  interface  napi_generator  qemu-run  third_party  vendor
arkcompiler  build  build.sh  developertools  docs  drivers  ide  kernel  productdefine  test  third_party  vendor
industio@Ubuntu22:~/Purplr-Pi-OH$
```

4.2. 打补丁

直接下载：

 [purple-pi-oh-patch.zip](#)

网盘下载：

链接：https://pan.baidu.com/s/14HMKFxyfwTJWJS_Xv08mQ?pwd=1234

提取码：1234

下载后将补丁放到当前代码根目录下，如下图所示：

```
industio@Ubuntu22:~/Purplr-Pi-OH$ ls
applications  base  build.py  commonlibrary  device  domains  foundation  interface  napi_generator  purple-pi-oh-patch.zip  qemu-run  test  third_party  vendor
arkcompiler  build  build.sh  developertools  docs  drivers  ide  kernel  productdefine  qemu-run  test  third_party  vendor
industio@Ubuntu22:~/Purplr-Pi-OH$
```

然后执行如下命令：

Bash

```
1  $ unzip purple-pi-oh-patch.zip
2  $ cd purple-pi-oh-patch/
3  $ ./ido_patch.sh
```

打入补丁成功后如下图所示：

```
industio@Ubuntu22:~/Purplr-Pi-OH/purple-pi-oh-patch$ ls
ido_device  ido_others  ido_patch.sh  ido_vendor
industio@Ubuntu22:~/Purplr-Pi-OH/purple-pi-oh-patch$
industio@Ubuntu22:~/Purplr-Pi-OH/purple-pi-oh-patch$ ./ido_patch.sh
patch complete!
industio@Ubuntu22:~/Purplr-Pi-OH/purple-pi-oh-patch$
```

4.3. OHOS4.0 SDK编译

4.3.1. SDK完整编译

```
1  $ bash build/prebuilts_download.sh
2  $ ./build.sh --product-name purple_pi_oh --ccache --no-prebuilt-sdk
```

SDK编译成功如下图所示：

```
Please modify according to README.md
[OHOS INFO] purple_pi_oh build success
[OHOS INFO] Cost time: 2:59:51
====build successful====
2024-05-22 14:20:55
+++++
```

失败时log索引位置：./out/purple_pi_oh/error.log

固件索引位置：./out/purple_pi_oh/packages/phone/images/

4.3.2. 编译不同dts

修改device/board/industio/purple_pi_oh/kernel/build_kernel.sh中的"IDO-PurPle-Pi-OH-HDMI"

编译为MIPI固件则改为："IDO-PurPle-Pi-OH-MIPI"

```
1  #eval $MAKE_OHOS_ENV ./make-ohos.sh IDO-PurPle-Pi-OH-HDMI $RAMDISK_ARG ${ENABLE_LT0_00}
2  eval $MAKE_OHOS_ENV ./make-ohos.sh IDO-PurPle-Pi-OH-MIPI $RAMDISK_ARG ${ENABLE_LT0_00}
```

5. FAQ

5.1. 烧录MIPI固件系统一直重启

没有接I2C触摸屏，系统开机后检测不到会重启；如果触摸坏了，可以在ido-pi-oh3566-mipi-v1.dts里关闭2c1

```
&i2c1 {  
    status = "disabled";  
};
```

5.2. 系统启动后进入不到桌面

ohos4.0系统有 bug,当出现此种问题时，需要执行 killall com.ohos.launcher。

此问题可以下载：

链接：https://pan.baidu.com/s/1G5C0lq3_P6RWbffbV5iMFg?pwd=1234

提取码：1234

里面的hap文件替换applications\standard\hap\下的同名文件。

5.3. 双频WiFi模块蓝牙打不开

双频WiFi模块为AW-NM256需要更换hcd文件：

把vendor\industio\purple_pi_oh\bluetooth\src\hardware.c中的"BCM43430A1.hcd"改为"BCM4345C0.hcd"再编译

5.4. 怎样编译full-sdk

```
./build.sh --product-name ohos-sdk
```

编译完成后在out\sdk\packages\ohos-sdk则为不同平台的full-sdk

注：其它FAQ问题可以进入FAQ专区查找对应问题：

<https://ask.industio.com/questions/OpenHarmony>

5.5. OpenHarmony 设置应用开机自启动

相关文章链接：<https://laval.csdn.net/671914a5522b003a545d9796.html>

5.6. OpenHarmony 4.1release 去除锁屏

相关文章链接: <https://industio.yuque.com/bx4amg/twek0i/lquqtfszrcxk9270?singleDoc>
